

Wireless Wall Switch



Features

- Wireless wall switch
- Use any 1 to 4 gang switch-plate
- Programmable switch functions
- Slim (4mm) internal module for flush or surface mounting
- Standard 'AAA' batteries for long 2+ years life.
- 'Lid-On' programming using Remote Control

Part No. LS30060WSI

Description

The wireless switch provides the convenience of a standard wall switch without the mess of installation.

The switch is supplied with a standard 20mm deep white surface-box. It can be fitted directly to the wall or flush mounted using a regular 25mm back-box.

Space permitting, the internal module can be removed from the supplied white switch-plate and re-fitted behind an existing switch or one of choice to match the décor.


The internal module provides 1000meter line-of-site range. Each switch can be programmed to control the whole garden or a selected Area. Multiple switches may be installed to operate as 2-way switches.

Specification

Input	-	1 to 4 switch inputs suitable for 2-way rocker switches or N.O. push buttons
Range	-	1000 metre wireless range line-of-site
Switch	-	Standard, white, 2-gang, rocker switch & 20mm surface box housing module and batteries
Module Size	-	45 x 45 x 4mm
RF	-	434.075MHz Narrow Band FM
Coding	-	Security channels 1–16
Power	-	2x AAA batteries
CE Compliance	-	EN220-300, EN 50081 – 1, To EN 50082 – 1

Application Example

Wireless Wall Switch
Part No. LS30060WSI

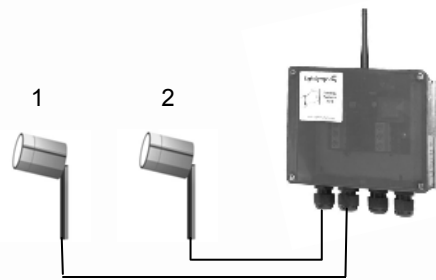

Lighting Control Module
Part No. LS30500LCM



Internal wireless
module

How to use it

Just fit the batteries and the wireless switch is ready for use. The unit is factory configured to switch Area's 1 and 2. Any Lighting Control Modules configured to these Area's will respond.

The switch can quickly be re-programmed to control different Area's or the whole garden together (garden on/off) using the remote control, see Programming below.

The slim (4mm) internal module can be removed and re-fitted behind a switch-plate of your choice. It's compatible with any 1 to 4 gang (2-way) switch-plate and powered by 2 x 'AAA' batteries (not shown).

Programming



Using the remote control (Part No. LS30050WRC), a switch's function can quickly be changed with the cover still on!

1. Press the switch you wish to re-program a couple of times on & off
2. Hold the remote near. Press & hold the desired remote key
3. It beeps to say it's learnt the new function

The switch can also be programmed without a remote, control using its internal programming key.